


5 Product appearance and wiring diagram

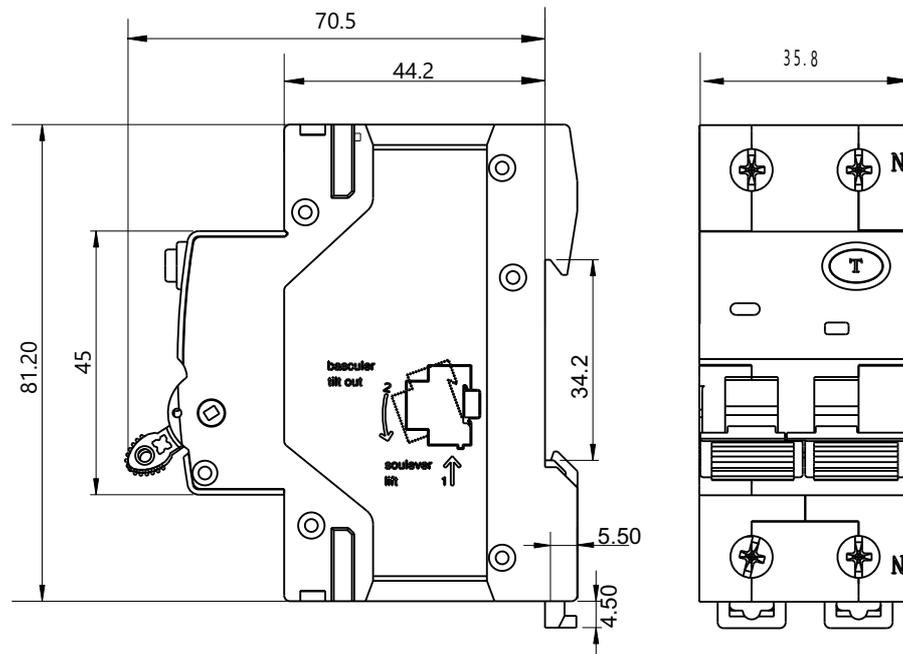

6 Installation and Precautions

- 6.1 The GYR9NE-ARC series arc fault circuit breaker should be inspected before installation, and it can be installed only after confirming that it is in good condition, work properly, and conforms to the applicable requirements;
- 6.2 GYR9NE-ARC series arc fault circuit breaker is installed inside and outside the distribution box, if it is installed alone, a grounded metal (or insulating material) protective panel should be installed to prevent electric shock;
- 6.3 The GYR9NE-ARC series arc fault circuit breaker should be inspected regularly during operation to remove the dust and stains on the incoming and outgoing lines and the surface of the product, and cut off the power supply during inspection;
- 6.4 GYR9NE-ARC series arc fault circuit breakers should be checked regularly during operating, and the test button should be pressed once a month;